



Photo: DJV182

Ergonomically designed handle with soft grip
Provides comfortable grip and more control while minimizing hand fatigue and pain.

Powered by 14.4V/ 18V Li-ion batteries
• High power density allows compact and lightweight tool design without power loss.
• Can be charged at any time because Li-ion battery is free from memory effect.

Variable speed control by dial
located on the rear side for easier operation

Newly designed dust nozzle
Dust nozzle can be set to Base firmly with Thumb screw.



Front cuff 24 (option)
Dust nozzle can be attached over the sawdust exhaust port for connection to Makita vacuum cleaner.

Cover Plate
Protects workpiece from scratches

Blower function
keeps the cut line clean.

Soft start
allows for accurate landing of the blade on the surface of workpiece in various applications.

Soft no load speed
reduces the blade stroke at a no load speed of 3,500rpm (highest speed mode) for easy trace of cutting line.

Battery & Charger Time Reference Chart (in Minutes)



Battery Model	Capacity	DC18RC / DC18RA	DC18SF	DC18SD	DC18SE (Automotive)
BL1840	4.0Ah	36min. Fast Charging	90min. 1 to 2 batteries 180min. 3 to 4 batteries	90min.	
BL1830	3.0Ah	22min. Fast Charging	60min. 1 to 2 batteries 120min. 3 to 4 batteries	60min.	
BL1815N	1.5Ah	15min. Fast Charging	30min. 1 to 2 batteries 60min. 3 to 4 batteries	30min.	

Cordless Jig Saws DJV182RME / DJV182Z / DJV181Z

Feature	DJV182RME / DJV182Z	DJV181Z
Variable Speed	Yes	Yes
Brake	Yes	Yes
Orbital Cutting	Yes	Yes
Bayonet Shank Jig Saw Blade	Yes	Yes
Dust Collecting	Yes	Yes
Built-in Job Light	Yes	Yes
Carrying Case	Yes	Yes
Battery Capacities	18V Li-Ion	18V Li-Ion
Maximum Cutting Depth	Steel: 3/8" (10 mm) Wood: 5-5/16" (135 mm) Aluminum: 25/32" (20 mm)	Steel: 3/8" (10 mm) Wood: 5-5/16" (135 mm) Aluminum: 25/32" (20 mm)
Stroke Per Minute	800 - 3,500 SPM	800 - 3,500 SPM
Length of Stroke	1" (26 mm)	1" (26 mm)
Overall Length	10-1/2" (266 mm)	11-3/4" (298 mm)
Net Weight	5.7 lbs (2.6 kg)	5.5 lbs (2.5 kg)

DJV182RME Standard Equipment: Two 18V (4.0 Ah) Li-Ion Batteries BL1840 (196401-9), Charger (DC18RC), Battery Cover (450128-8), Jig Saw Blade Set (2 Ea. B-10, BR-13, B-22) (792724-9), Hex Wrench 4 (783202-0), Anti-Splintering Device (415524-7), Cover Plate (417852-6)

DJV182Z Standard Equipment: Tool Only. Batteries and Charger Sold Separately. Jig Saw Blade Set (2 Ea. B-10, BR-13, B-22) (792724-9), Hex Wrench 4 (783202-0), Anti-Splintering Device (415524-7), Cover Plate (417852-6)

DJV181Z Standard Equipment: Tool Only. Batteries and Charger Sold Separately. Jig Saw Blade Set (2 Ea. B-10, BR-13, B-22) (792724-9), Hex Wrench 4 (783202-0), Anti-Splintering Device (415524-7), Cover Plate (417852-6)

When QUALITY & SERVICE COUNTS – Choose Makita
makita.ca



Cordless Jig Saws
DJV182RME / DJV182Z
DJV181Z



As powerful as corded Jigsaws, yet lightweight

DJV182RME, DJV182Z
Top handle type

DJV181Z
Barrel handle type



Excellent Performance Provides High Productivity

Powerful BLDC motor

provides higher operating efficiency than that of the current BLDC motor, increasing max output power and work amount on a single full battery charge.

BL MOTOR



Barrel handle type

DJV181Z



Top handle type

DJV182RME / DJV182Z

Compact, Lightweight design

Barrel handle type



2.5kg (DJV181)

DJV181; with battery BL1840

Electronic push button switch

located on the both sides of Housing

How to start the machine;

Press button A once*1 and the machine will be turned into standby mode and LED job light will turn on. Then press button B within 10 seconds*2 and the machine will start.

How to stop the machine;

Press button A to stop and the machine will be automatically locked in off mode. Press button 2 to stop in standby mode.



*1: If button A is pressed once again within 10 seconds, LED job light will turn off and the machine will be automatically locked in off mode.

*2: If no button is pressed for 10 seconds after LED job light is turned on, the light will automatically turn off and the machine will be automatically locked in off mode.

Note: Button B is disabled when the machine is locked in off mode.

Top handle type



2.6kg (DJV182)

DJV182; with battery BL1840

Trigger switch with lock-on button

provides the same excellent operability as AC models

How to start the machine;

Press Lock-off button once*1 and the machine will be turned into standby mode and LED job light will turn on. Then pull the trigger of Switch within 10 seconds*2 and the machine will start. For continuous operation, pull the trigger then push in Lock-on button.

How to stop the machine;

Release the trigger of Switch to stop the machine. When the machine is locked in continuous operating mode, pull the trigger fully then release it.



*1: If you press Lock-off button once again within 10 seconds, LED job light will turn off and the machine will be automatically locked in off mode.

*2: If Lock-off button is not pressed nor the trigger of Switch is not pulled for 10 seconds after LED job light is turned on, the light will automatically turn off and the machine will be automatically locked in off mode.

Note: Trigger switch is disabled when the machine is locked in off mode.

LED job light (twin-light)

for illuminated operation



Toolless blade clamp

Blade can be attached with single action - simply by pushing it into the clamp;

can be also removed easily with single action - simply by turning large lever

