



PARTS LIST

Item No	Type	Part No	Description	Qty	Unit
001		266898-7	THUMB SCREW M4X8	1	PC.
002		346796-2	SHOE PLATE	1	PC.
003		763258-9	COLLET NUT	1	PC.
004		763677-9	COLLET CONE 1/8"	1	PC.
005		266326-2	TAPPING SCREW 4X18	4	PC.
006		213048-5	O RING 6	2	PC.
007		346795-4	SHOE SUPPORT	1	PC.
008		265085-5	+ COUNTERSUNK HEAD SCREW M4X8	1	PC.
009		620D25-8	LED CIRCUIT	1	PC.
010		140V89-9	BEARING BOX COVER COMPLETE	1	PC.
011		234332-5	COMPRESSION SPRING 7	1	PC.
012		412727-4	SHAFT LOCK	1	PC.
013		412702-0	BEARING BOX	1	PC.
014		267785-3	WAVE WASHER 23	1	PC.
015		211236-8	BALL BEARING 6002DDW	1	PC.
016		267164-5	FLAT WASHER 15	1	PC.
017		519636-9	ROTOR ASS'Y	1	PC.
017	INC.		Item No. 15,16,18,19		
018		253186-1	FLAT WASHER 7	1	PC.
019		210017-7	BALL BEARING 607DDW	1	PC.
020		857P76-2	DCO181 NAME PLATE	1	PC.
021		266326-2	TAPPING SCREW 4X18	5	PC.
022		140G30-2	CAP COMPLETE	1	PC.
022	INC.	213218-6	O RING 16	1	PC.
023	2	191L28-2	HOUSING SET	1	SET
023	2	INC. 252126-6	HEX. LOCK NUT M4-7	1	PC.
023	2	INC. 263005-3	RUBBER PIN 6	2	PC.
023	2	INC. 8020P8-0	CAUTION LABEL	1	PC.
024		455447-7	SWITCH KNOB	1	PC.
025		233121-5	COMPRESSION SPRING 4	1	PC.
026		412233-9	SWITCH LEVER	1	PC.
027		651445-1	SWITCH FPM-1130	1	PC.
028	1	629A08-7	* STATOR COMPLETE	1	PC.
028	2	629B70-8	* STATOR	1	PC.
029		643874-2	TERMINAL	1	PC.
031		857P84-3	DCO181 SERIAL NO. LABEL	1	PC.
032		8020P8-0	CAUTION LABEL	1	PC.
033		620L15-9	* CONTROLLER	1	PC.

Item No	Type	Part No	Description	Qty	Unit
034		652119-7	* PH SCREW M2X6	6	PC.
A01		P-80010	DUST COLLECTION COVER	1	PC.
A02	2	191G69-8	DRYWALL GUIDE BIT 1/8" 3.18MM	2	SET
A02	2	INC. 733240-2	DRYWALL GUIDE BIT 1/8" 3.18MM	2	PC.
A04		781037-3	WRENCH 17	1	PC.
F01		763676-1	COLLET CONE 1/4" (6.35MM)	1	PC.

SERVICE CHANGES

1. Changes on Stator, Controller etc.

(T/I#DH482)

Item No.	Description	Type 1	Type 2
28	STATOR	629A08-7	629B70-8
33	CONTROLLER	-----	620L15-9
34	PAN HEAD SCREW M2X6	-----	652119-7

Above parts are completely interchangeable as a set.

See T/I#DH482 for repair and wiring